

Our associates will ensure the tool works properly before you leave the store. If you experience issues with the tool while completing your project, simply bring it back to the Tool Rental Center to get a replacement. If you purchase Damage Protection at the time of your rental, you are not responsible for repair costs for tools that break due to normal use.





Professional 14 Inch Rotary Surface Cleaner AW-7020-8009

Mi-T-M Corporation
50 MI-T-M Drive Peosta, IA 52068
Ph: 800-553-9053 - Fax: 563-556-1235



SPECIFICATIONS

Model	AW-7020-8009
Operating Pressure	4,200 PSI
Maximum Flow	8.0 GPM
Maximum Temp.	180°F
Nozzles (2 per unit)	25020
Weight	4.4 lbs
Dimensions	16" x 16" x 7.25"

⚠ WARNING

⚠ **WARNING:** This product can expose you to chemicals including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

HAZARD	POTENTIAL CONSEQUENCE	PREVENTION
RISK OF BODILY INJURY	Serious injury or death could occur.	<p>ALWAYS read, understand, and follow operation instructions.</p> <p>ALWAYS wear protective eye wear.</p> <p>ALWAYS keep clear of rotating nozzles.</p> <p>NEVER lock trigger gun open with any device.</p>
RISK OF EQUIPMENT DAMAGE	Risk of major repair.	<p>Drain water in cold weather to avoid freezing.</p> <p>Use only genuine Mi-T-M replacement parts for necessary repairs.</p> <p>Tampering with any part of this machine will void all warranties.</p>

OPERATION:

Read, understand, and follow ALL safety guidelines and operation instructions prior to use.

1. Connect the lance from your pressure washer to the surface cleaner.
2. Turn water on. Open trigger gun for flow of water through nozzles. Nozzles must have flowing spray. If not, remove tips and clean; reassemble, making sure that groove of nozzle is parallel to spray bar. Use Teflon tape when installing nozzles.
3. Start pressure washer. The Rotary Surface Cleaner is ready for operation.
4. Walk slowly behind the Rotary Surface Cleaner cleaning as you go. If striping occurs, slow down your pace.
5. Check "weep holes" on bottom of swivel periodically. Water will seep slowly; if water shoots out, stop and replace seals. Swivel assembly can be rebuilt.
6. For maximum effectiveness keep spray tips clean. If the machine vibrates, stop and clean spray tips.

DO NOT ALLOW MACHINE TO REMAIN STATIONARY ON SOFT SURFACES, SUCH AS WOOD.

CAUTION: Striking any raised obstacle during operation will damage machine. If contact does occur and results in vibration when operating machine, **STOP** and replace spray bar. Continued operation could result in serious injury or damage to machine.



!SAVE THESE INSTRUCTIONS!

PARTS LIST



AW-7020-8009			
Ref. #	Description	Part #	Qty.
1	Rotary Head	33-0598	1
2	Cover	33-0597	1
3	Nozzle	18-0298	2
4	Rotary Arm	33-0596	1
5	14" Brush	33-0595	1
6	Quick Connect Fitting	17-0085	1

TROUBLE SHOOTING



- 1** Rotary Arm doesn't spin:
- Remove, inspect and clean nozzles. Replace if damaged
 - Ensure there is no water leaking excessively from the weep holes on the rotary head (water will normally seep out of these holes).



- 2** Leaves striping:
- Ensure nozzles aren't damaged or plugged.
 - Ensure rotary arms are straight.
 - Ensure nozzle groove is in alignment with arm.

WARRANTY

All components of the surface cleaning system have a 90-day warranty against manufacturer's defects only.