

Our associates will ensure the tool works properly before you leave the store. If you experience issues with the tool while completing your project, simply bring it back to the Tool Rental Center to get a replacement. If you purchase Damage Protection at the time of your rental, you are not responsible for repair costs for tools that break due to normal use.



INSTRUCTIONS

#24-612 Deluxe Adjustable Knee Kicker

INTENDED USAGE

Knee Kickers should be used for positioning carpet, hooking carpet on tack strip, and light stretching in cramped areas. Use a power stretcher for "stretching-in" rooms, since hard kicking can injure the user and damage carpet.

LENGTH ADJUSTMENT

A press of the button allows the choice of 5 length adjustments from 17-1/2" to 21-1/2". Always check that both sets of buttons are engaged before beginning your kicking.

PIN PENETRATION

The pin adjustment dial gives a visual reference showing pin depth. Set the depth to the approximate carpet thickness. In use, the long pins should reach through the pile into the carpet backing, but not through the backing.

BUMPER PAD ROTATION

The bumper is seamless and is foam-filled. The pad can be turned for an even distribution of wear.

