

Our associates will ensure the tool works properly before you leave the store. If you experience issues with the tool while completing your project, simply bring it back to the Tool Rental Center to get a replacement. If you purchase Damage Protection at the time of your rental, you are not responsible for repair costs for tools that break due to normal use.



OHIO STEEL INDUSTRIES

PROFESSIONAL GRADE



610-24649/1084

2000 LB STEEL FOLDING LOADING RAMPS

U.S. PATENT No. 5,645,394



**READ AND FOLLOW ALL SAFETY RULES AND OPERATING
INSTRUCTIONS BEFORE USING THIS EQUIPMENT**

Safety Rules



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

Read and understand all safety rules and operating instructions before using these loading ramps.

Follow all safety rules and operating instructions provided by manufacturer of equipment to be loaded when using loading ramps.

Never allow children or untrained persons to use loading ramps.

Never ride any vehicle up or down the loading ramps.

Never load or unload power equipment with its engine running.

Never stand in the path of equipment when loading or unloading with the ramps.

Always use on stable, level surfaces.

Always set the emergency brake and chock the tires of the loading vehicle to prevent any movement while loading or unloading the equipment.

Always attach straps between bumper of the truck and the center of the loading ramp to prevent kick back.

Check product for worn, loose, or damaged parts before each use. If any damage is present, repair the product before using.

Check product for loose or missing fasteners before each use. Tighten or replace fasteners as needed before using.

Never exceed load capacity of loading surface (e.g. tailgate). If unknown, consult with the manufacturer to find the maximum load capacity.

Never exceed load capacity of 1,000 pounds per ramp.

Operating Instructions

USAGE:



Look for a wall or depression to reduce the loading angle, the lower the ramp angle the easier the loading of the vehicle will be.

Park the loading vehicle on flat, firm, or grassy terrain.

Set the emergency brake and chock the tires of the loading vehicle to prevent any movement while loading and unloading the equipment.

Center loading ramp on the loading surface with support bars on top.

Make sure ramps are aligned at the proper distance apart so that the tires of the equipment being loaded are centered on the ramp.

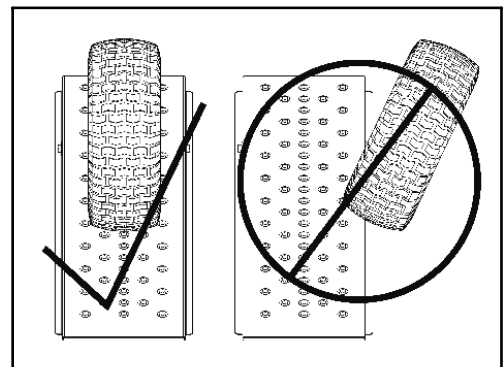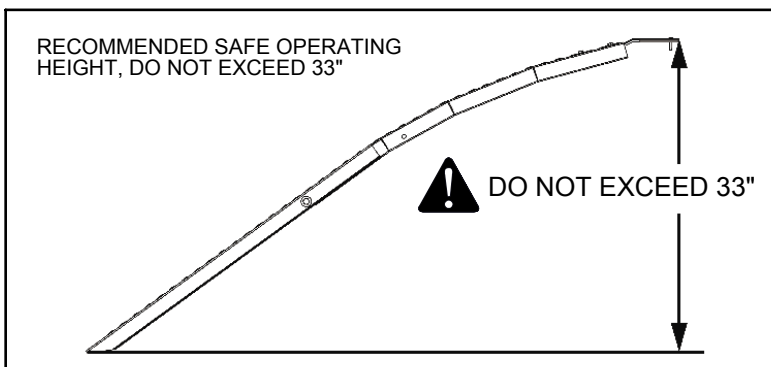

To prevent kickback, always attach cam buckle straps between the center of the loading ramps and the loading vehicle. Use supplied clevis pins to secure ramps to vehicle as needed.

For safety, always roll or winch equipment up or down the ramp. **NEVER** attempt to ride equipment up or down the loading ramp.

MAINTENANCE:

Before each use, always check for any worn, loose, or damaged parts on the loading ramps. If any damage is present, **DO NOT USE THE RAMP.**

Periodically check the fasteners to make sure they are still tight and in place.

Keep Ramp surface clean by occasionally cleaning with water and any mild detergent.

STORAGE:

Fold ramp in half for proper space saving storage. Store in a clean, dry area only.

If there are any missing parts, or if you have any questions on assembly, operation, maintenance or safety, please call: **1-800-652-6231**

www.ohiosteel.com
(800) 652-2321