

**Our associates will ensure the tool works properly before you leave the store. If you experience issues with the tool while completing your project, simply bring it back to the Tool Rental Center to get a replacement. If you purchase Damage Protection at the time of your rental, you are not responsible for repair costs for tools that break due to normal use.**



# Operator's manual

## Drive motor M1500, M2500 for modular internal vibrator HMS



Model	M1500, M2500
Document	5100011253
Issue	12.2017
Version	04
Language	en



Copyright © 2017 Wacker Neuson Produktion GmbH & Co. KG

Printed in Germany

All rights are reserved, in particular the worldwide applicable copyright, right of duplication and right of distribution.

This document may only be used by the recipient for the intended purpose. The document may not be reproduced entirely or partially, or translated into any other language.

Reproduction or translation, even extracts thereof, only with written approval of Wacker Neuson Produktion GmbH & Co. KG.

Any breach of the statutory provisions, in particular the protection of copyright, will lead to civil and criminal prosecution.

Wacker Neuson Produktion GmbH & Co. KG is constantly working on the improvement of its products as part of the technical further development. Therefore, we reserve the right to make changes to the illustrations and descriptions in this documentation without incurring any obligation to make changes to machines already delivered.

Errors excepted.

The machine on the cover may have special equipment (options).



**Manufacturer**

Wacker Neuson Produktion GmbH & Co. KG

Wackerstraße 6

D-85084 Reichertshofen

[www.wackerneuson.com](http://www.wackerneuson.com)

Tel.: +49 845 3340 3200

E-mail address: [service-LE@wackerneuson.com](mailto:service-LE@wackerneuson.com)

**Original operator's manual**



**CALIFORNIA Proposition 65 Warning**



**WARNING**

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

---



**WARNING**

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

---



**WARNING**

Cancer and Reproductive Harm -  
[www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

---



**WARNING**

Batteries, battery posts, terminals and related accessories contain lead and lead compounds, and other chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. WASH HANDS AFTER HANDLING.

---





<b>1</b>	<b>Preface</b> .....	<b>5</b>
<b>2</b>	<b>Introduction</b> .....	<b>6</b>
2.1	Using the manual.....	6
2.2	Storage location of the manual.....	6
2.3	Accident prevention regulations.....	6
2.4	More information.....	6
2.5	Target group .....	6
2.6	Explanation of symbols.....	6
2.7	Wacker Neuson Contact partner .....	7
2.8	Disclaimer.....	7
2.9	Product identification of the machine.....	7
<b>3</b>	<b>Security</b> .....	<b>8</b>
3.1	Policy .....	8
3.2	Qualification of the operating personnel .....	10
3.3	Protection equipment.....	10
3.4	Transport .....	11
3.5	Operating safety .....	11
3.6	Safety when operating hand-held equipment .....	12
3.7	Safety when operating electrical equipment .....	12
3.8	Safety when operating modular internal vibrators .....	14
3.9	Maintenance .....	14
<b>4</b>	<b>General safety instructions for power tools</b> .....	<b>15</b>
<b>5</b>	<b>Safety and information labels</b> .....	<b>17</b>
<b>6</b>	<b>Setup and function</b> .....	<b>18</b>
6.1	Standard package.....	18
6.2	Application .....	18
6.3	Application area .....	18
6.4	Mode of operation.....	18
<b>7</b>	<b>Components and operator's controls</b> .....	<b>19</b>
7.1	Components and operator's controls of the drive motor .....	19
7.2	Components of the HMS .....	19
7.3	Components of the flexible shaft (optional) .....	20
7.4	Components of the vibrator head (optional) .....	20
<b>8</b>	<b>Transport, entire system (HMS)</b> .....	<b>21</b>
<b>9</b>	<b>Assembly of the HMS</b> .....	<b>22</b>
9.1	Pre-assemble the vibrator head.....	22
<b>10</b>	<b>Operation</b> .....	<b>24</b>
10.1	Before commissioning .....	24
10.2	Commission .....	24
10.3	Decommissioning .....	26
<b>11</b>	<b>Maintenance</b> .....	<b>27</b>
11.1	Qualification of the maintenance personnel.....	27
11.2	Maintenance schedule.....	27
11.3	Maintenance work.....	28
<b>12</b>	<b>Troubleshooting</b> .....	<b>33</b>
<b>13</b>	<b>Permissible combinations</b> .....	<b>34</b>
13.1	Drive motor – Flexible shaft – Vibrator head .....	34

<b>14</b>	<b>Disposal</b> .....	<b>35</b>
	14.1 Disposal of old electrical and electronic equipment.....	35
<b>15</b>	<b>Accessories</b> .....	<b>36</b>
<b>16</b>	<b>Technical data</b> .....	<b>37</b>
	16.1 Drive motor .....	37
	16.2 Flexible shaft-E (optional).....	37
	16.3 Flexible shaft-S (optional).....	38
	16.4 Vibrator head standard (optional) .....	38
	16.5 Vibrator head HA (optional) .....	39
	16.6 Extension cable .....	39
<b>17</b>	<b>Glossary</b> .....	<b>41</b>

## 2 Introduction

### 2.1 Using the manual

This manual is to be considered part of the machine and should be carefully stored during the entire service life of the machine. This manual shall be transferred to subsequent owners or users of the machine.

### 2.2 Storage location of the manual

This manual is part of the machine and must be kept in the immediate vicinity of the machine and made accessible to staff at all times.

If this manual is lost, or if a second copy is required, there are two options to obtain a replacement:

- Download from the Internet: [www.wackerneuson.com](http://www.wackerneuson.com)
- Contact your Wacker Neuson contact partner.

### 2.3 Accident prevention regulations

In addition to the notes and safety instructions in this manual, the local accident prevention regulations as well as the national health and safety regulations apply.

### 2.4 More information

This manual applies to various machine types from one product series. For this reason, some figures may vary slightly in appearance from the machine purchased. Depending on the model, there may be descriptions of components that are not included in the standard package.

The information contained in this manual is based on machines manufactured up to the time of printing. Wacker Neuson reserves the right to change this information.

The manufacturer shall immediately include any modifications or additions in this manual.

### 2.5 Target group

Individuals working with this machine must be regularly trained on the dangers of handling the machine.

This manual is intended for the following people:

Operating personnel:

These individuals have been trained on the machine and informed about the possible dangers in the event of improper conduct.

Technically trained personnel:

These people have professional training as well as additional knowledge and experience. They are able to assess the tasks assigned to them and recognize possible dangers.

### 2.6 Explanation of symbols

This manual contains specially emphasized safety instructions in the following categories: **DANGER**, **WARNING**, **CAUTION** and **NOTICE**.

Before performing any work on or with this machine, the notes and safety instructions must be read and understood. All notes and safety instructions in this manual must be passed on to the maintenance, repair, and transport personnel.



---

#### **DANGER**

This combination of symbol and signal word indicates a hazardous situation that will lead to death or serious injury if it is not avoided.

---



---

#### **WARNING**

This combination of symbol and signal word indicates a hazardous situation that can lead to death or serious injury if it is not avoided.

---



---

#### **CAUTION**

This combination of symbol and signal word indicates a hazardous situation that can lead to minor injury or damage to the machine if it is not avoided.

---

**NOTICE**

Supplementary information.

**2.7 Wacker Neuson Contact partner**

Depending on the country, the Wacker Neuson contact partner is a Wacker Neuson service department, a Wacker Neuson subsidiary, or a Wacker Neuson dealer.

On the Internet at [www.wackerneuson.com](http://www.wackerneuson.com).

**2.8 Disclaimer**

For the following violations, Wacker Neuson dismisses any liability for personal injury or material damage:

- Failure to follow this manual.
- Unintended use.
- Deployment of untrained personnel.
- Using non-approved spare parts and accessories.
- Improper handling.
- Structural modifications of any kind.
- Failure to observe the "General Terms and Conditions" (GT&Cs).

**2.9 Product identification of the machine****Data of the nameplate**

The nameplate contains information that uniquely identifies this machine. This information is required for ordering spare parts and when inquiring about technical issues.

- Enter information about the machine in the following table:

Designation	Your information
Group and model	
Year of manufacture	
Machine number	
Version no.	
Item number	

## **3 Security**

### **3.1 Policy**

#### **Prior Art**

The equipment is built according to prior art and the recognized technical safety rules. Nevertheless, improper use can result in hazards to life and limb of the user or third parties or to damage to the equipment and other material assets.

#### **Proper use**

The equipment may only be used for the operation of flexible shafts and vibrator heads.

The equipment may only be combined with permissible components.

The equipment may only be operated with flexible shafts and vibrator heads permitted by Wacker Neuson.

The equipment may not be used for the following purposes:

- The connection of non-permissible components.
- Operation without a flexible shaft and vibrator head.

Other special applications must be tested and released by Wacker Neuson.

Use in accordance with the intended purpose also includes the observation of all notes in this operator's manual as well as complying with the prescribed care and maintenance instructions.

Any other or exceeding use is considered improper. The manufacturer's liability and warranty are canceled for any damage resulting from improper use. The risk lies entirely with the operator.

#### **Structural changes**

Do not carry out any structural changes without written approval from the manufacturer. You will thereby be endangering your safety and the safety of others! Additionally, the manufacturer's liability and warranty will be canceled.

In particular, the following cases are considered structural changes:

- Opening the device and permanent removal of components that originate from Wacker Neuson.
- Installing new components that do not originate from Wacker Neuson or are not comparable in the design system and quality of the original parts.
- Attaching accessories that do not originate from Wacker Neuson.

You can safely install spare parts that originate from Wacker Neuson.

You can safely attach accessories that are available for your equipment in the Wacker Neuson product range. To do so, please refer to the attachment regulation in this operator's manual.

For example, do not drill into the housing to attach signs. Water can enter into the housing and damage the equipment.

#### **Prerequisite for operation**

The flawless and safe operation of the equipment requires the following:

- Proper transport, storage and assembly.
- Careful operation.
- Careful care and maintenance.

#### **Operation**

Only operate the equipment in accordance with the intended purpose and in a technically flawless condition.

Only operate the equipment in a safety and hazard-conscious manner and with all protective devices. Do not change or bypass any protective devices.

Before beginning work, check the effectiveness of the operator's controls and protective devices.

Never operate the unit in explosive environments.

#### **Supervision**

Never leave equipment running without supervision!

### **Maintenance**

Regular maintenance work is required for a flawless and permanent functioning of the equipment. Neglected maintenance reduces the equipment's safety.

- The prescribed maintenance intervals must be strictly observed.
- Do not use the equipment if maintenance or repairs are needed.

### **Faults**

In the event of malfunctions, you must immediately switch the equipment off and secure it.

Immediately rectify faults that can impair safety!

Have damaged or defective components replaced immediately!

You can find more information in the chapter *Troubleshooting*.

### **Spare parts, accessories**

Only use spare parts from Wacker Neuson or such spare parts that are comparable in the design system and quality of the original parts.

Only use accessories by Wacker Neuson.

Non-observance cancels out any liability.

### **Disclaimer**

For the following violations, Wacker Neuson dismisses any liability for personal injury or material damage:

- Structural change.
- Improper use.
- Non-observance of this operator's manual.
- Improper handling.
- Using spare parts that do not originate from Wacker Neuson or are not comparable in the design system and quality of the original parts.
- Using accessories that do not originate from Wacker Neuson.

### **Operator's manual**

Always keep the operator's manual readily available on the equipment or at the place of application of the equipment.

If you should lose the operator's manual or require another copy, please contact your Wacker Neuson contact partner or download the operator's manual from the Internet ([www.wackerneuson.com](http://www.wackerneuson.com)).

Hand over this operator's manual to every other operator or subsequent owner of the equipment.

### **Country-specific regulations**

Also observe country-specific regulations, standards and guidelines for accident prevention and environmental protection, such as dealing with hazardous substances and wearing personal protection equipment.

Supplement the operator's manual with additional instructions on taking operational, regulatory, national or generally applicable safety guidelines into consideration.

### **Operating elements**

Always keep the equipment's operator's controls dry, clean and free from oil and grease.

Operator's controls, such as the ON/OFF switch, throttle control handles, etc. may not be locked, manipulated or changed without permission.

### **Check for damage**

Check the shutdown equipment at least once per shift for externally visible damage and deficiencies.

Do not operate the equipment if damage or deficiencies are discernible.

Have damage and deficiencies rectified immediately.

## **3.2 Qualification of the operating personnel**

### **Qualification of the operator**

Only technically trained personnel may start and operate the equipment. In addition, the following conditions apply:

- They are physically and mentally suitable.
- They are trained in the independent operation of the equipment.
- They are trained how to use the equipment in accordance with the intended purpose.
- They are familiar with the necessary safety devices.
- They are authorized to operate equipment and systems independently according to the standards of safety engineering.
- They are appointed by the contractor or operator to independently work with the equipment.

### **Faulty operation**

In the event of faulty operation, misuse or operation by untrained personnel, dangers threaten the health of the operator or third parties as well as the condition of the device or other material assets.

### **User responsibilities**

The user must make the operator's manual available to the operator and ensure that the operator has read and understood them.

### **Recommendations for work**

Please observe the following recommendations:

- Only work in a good physical condition.
- Work attentively, especially at the end of working hours.
- Do not work with the equipment when you are tired.
- Perform all work calmly, cautiously and carefully.
- Never work under the influence of alcohol, drugs or medication. Your vision, reactivity and judgment may be impaired.
- Work so that no third parties are harmed.
- Make sure that there are no people or animals in the danger area.

## **3.3 Protection equipment**

### **Working clothes**

The clothing should be appropriate, i.e. tight fitting, but not cumbersome.

Generally, do not have any long hanging hair, loose clothing or jewelry (including rings) during on construction sites. There is a risk of injury, for example from being snagged or pulled in on moving equipment parts.

Only wear flame-resistant working clothing.

### **Personal Protection Equipment**

Use personal protection equipment in order to avoid injuries and health hazards:

- Safety shoes.
- Work gloves made from sturdy material.
- Overalls made from sturdy material.
- Protective helmet.
- Ear protection.
- Facial protection.
- Eye protection.

### **Ear protection**

With this equipment, it is possible to exceed the permissible, country-specific noise limit (personal rating level). This is why you may have to wear ear protection under certain circumstances. You can find the exact value in the chapter *Technical data*.

Work particularly cautiously and pay attention when wearing ear protection, as your ability to hear noises, such as screams or signal tones, is restricted.

Wacker Neuson recommends always wearing ear protection.

### 3.4 Transport

#### Switch off the unit

Before transport, switch the equipment off and remove the plug from the plug receptacle. Allow the engine to cool down.

#### Transporting the equipment

Secure the equipment on the means of transport from tipping over, falling down or sliding.

#### Recommissioning

Before recommissioning, attach and fasten equipment, equipment parts, accessories or tools that were dismantled for transport purposes.

Proceed only according to the operator's manual.

### 3.5 Operating safety

#### Explosive area

Never operate the unit in explosive environments.

#### Work environment

Familiarize yourself with the work environment before beginning work. For example, this includes the following points:

- Obstacles in the work and traffic area.
- Load-bearing capacity of the soil.
- Necessary protection of the construction site, especially for the public transport area.
- Necessary protection of walls and ceilings.
- Options available in the event of accidents.

#### Safety in the working area

If you work with the equipment, pay particular attention to the following points:

- Pay maximum attention near drops or slopes. Risk of crashing.
- No people may be in the working area.

#### Checks before starting work with the HMS

Check the following points before starting work:

- Connection values of the drive motor.
- Condition of the individual components.
- Permissible combinations and connection links of the HMS.

#### Commissioning the HMS

Observe the safety instructions and warning notices on the drive motor as well as those in the operator's manual.

Never operate equipment that is in need of maintenance or repairs.

Operate the HMS according to the operator's manual from the drive motor.

#### Stability

Always ensure good footing when working with the HMS. This especially applies when working on scaffolding, ladders, uneven or slippery surfaces.

#### Beware of hot parts

Do not touch the hot vibrator head (component of HMS) during operation or shortly thereafter. The vibratory head can become very hot and cause burns.

#### Use caution with moving parts of the HMS

Keep hands, feet and loose clothing away from moving or rotating vibrator head (component of HMS).

#### Do not use components of the HMS as a climbing aid or securing means

Never use the protection hose, power cable or other components of the HMS as a climbing aid or securing means.

**Protect the flexible shaft (component of the HMS)**

Do not excessively bend or kink the flexible shaft.

Do not pull the flexible shaft over sharp edges.

If the flexible shaft has become jammed in the reinforcement, switch off the drive motor and disconnect the flexible shaft from the drive motor. Then release the clamped flexible shaft by carefully moving it back and forth.

**Switch off the unit**

Switch the equipment off and remove the plug from the plug receptacle in the following situations:

- Before breaks.
- When you are not using the equipment.

Before putting the equipment down, wait until it comes to a complete standstill.

Set the equipment down so that it cannot tip over, fall down or slip.

**Storage**

Set the equipment down so that it cannot tip over, fall down or slip.

**Storage location**

After operation, store the cooled equipment in a locked, clean, frost-protected and dry location that is inaccessible to children.

**Vibration load of the HMS**

Vibration-induced long-term damage cannot be ruled out entirely during intensive use of walk-behind drive motors.

Observe the respective statutory provisions and guidelines in order to keep the vibrations to a minimum.

You can find information about the vibration load of the HMS in the chapter *Technical Data*.

**3.6 Safety when operating hand-held equipment****Working safely with hand-held equipment**

While working, only hold the equipment by the handle intended solely for this purpose.

Always keep the power cable behind and away from the drive motor and keep the power cable away from the working area of the vibrator head.

Ensure that the air intakes and outlets are clear.


**Setting down hand-held equipment properly**

Carefully lay down the equipment. Do not throw the equipment on the floor or from great heights. When thrown down, the equipment can injure other people or even be damaged itself.

**3.7 Safety when operating electrical equipment****Specific regulations for electrical equipment**

Observe the safety instructions in the *General safety instructions* brochure from the equipment's standard package.

Also observe the country-specific regulations, standards and directives for accident prevention in conjunction with electrical systems and equipment.

 **WARNING** Read all safety instructions and information Failure to comply with the safety information and instructions can cause electric shock, fire and / or serious injuries.

**Save all safety information and instructions for the future.**

---

## Electric power supply for electrical equipment of class rating II

---

### NOTICE

The rated voltage can be found on the nameplate of your equipment.

---

You may only connect the equipment to electric power supplies if all device parts can be found in a technically perfect condition. In particular, pay attention to the following components:

- Plug.
- Power cable in its entire length.
- Switch membrane of the ON/OFF switch, if present.
- Plug receptacles.

Electrical equipment of class rating II has a reinforced or dual insulation (protective insulation) and does not have a connection to the grounded conductor.

With a mains connection, at least one of the following safety devices must be present at the point of connection:

- Protective ground fault interrupter (GFI or GFCI).
- Insulation monitor.
- IT net.
- Isolating transformer.

---

### NOTICE

Observe the respective national safety directives!

---

### Extension cable (accessories)

You may only operate the equipment with undamaged and tested extension cables!

You may only use extension cables with grounded conductors and a proper grounded conductor connection to the plug and coupling (only equipment of class rating I, see chapter *Technical data*).

You may only use tested extension cables that are suitable for construction site use: Wacker Neuson recommends H07RN-F, H07BQ-F, a SOOW-cable or a country-specific equivalent design.

You must immediately replace extension cables with damage (e.g. tears in the casing) or loose plugs and couplings.

Cable drums and multi-pole plug receptacles must meet the same requirements as extension cables.

Protect extension cable, multi-pole plug receptacles, cable drums and connection couplings from rain, snow or other forms of moisture.

### Completely unroll the cable drum (accessories)

Risk of fire if the cable drum is not completely unrolled.

Completely unroll the cable drum before operation.

### Protect the power cable

Do not use the power cable to pull or lift the equipment.

Do not pull the plug of the power cable out of the plug receptacle by pulling the cable.

Protect the power cable from heat, oil and sharp edges.

Have your Wacker Neuson contact partner immediately replace damaged power cables or loose plugs.

### Protect against moisture

Protect the equipment from rain, snow or other forms of moisture. Damage and other malfunctions are possible.

**Protect against excessively high or low temperatures**

Protect the equipment against excessively high or low temperatures. The insulation of live parts can otherwise be damaged.

You can find information about the permissible temperature range in the chapter *Technical data*.

**3.8 Safety when operating modular internal vibrators****Shoulder strap**

Wacker Neuson recommends using a shoulder strap.

**3.9 Maintenance****Maintenance work**

Care and maintenance work may only be carried out insofar as it is described in this operator's manual. All other work, such as the replacement of the power cable, must be performed by the Wacker Neuson contact partner in order to avoid safety hazards.

You can find more information in the chapter *Maintenance*.

**Disconnect from the electric power supply**

Before performing maintenance jobs, you must remove the plug from the plug receptacle in order to disconnect the equipment from the electric power supply.

**Cleaning**

Always keep the equipment clean and clean it after every use.

Do not use any fuels or solvents. Explosion hazard!

Do not use any high pressure washers. Ingressing water can damage the unit. With electrical equipment, there is a serious risk of injury from electric shock.

## 4 General safety instructions for power tools



### WARNING

**Read all safety warnings, instructions, illustrations and specifications provided with this power tool.**

*Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.*

**Save all warnings and instructions for future reference.**

*The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.*

1. Working area safety
  - a) **Keep work area clean and well lit.** Cluttered or dark working areas invite accidents.
  - b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks, which can ignite dust or fumes.
  - c) **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.
2. Electrical safety
  - a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unchanged plugs and matching outlets will reduce risk of electric shock.
  - b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
  - c) **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
  - d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
  - e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
  - f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.
3. Personal safety
  - a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
  - b) **Use personal protective equipment. Always wear eye protection.** Protective equipment, such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.
  - c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
  - d) **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
  - e) **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
  - f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
  - g) **If devices are provided for the connecting of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.
  - h) **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tools safety principles.** A careless action can cause severe injury within a fraction of a second.
4. Use and handling of the power tool



- a) **Do not force the power tool.** Use the correct power tool for your application. *The correct power tool will do the job better and safer at the rate for which it was designed.*
  - b) **Do not use the power tool if the switch does not turn it on and off.** *Any power tool that cannot be controlled with the switch is dangerous and must be repaired.*
  - c) **Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power before making any adjustments, changing accessories, or storing power tools.** *Such preventive safety measures reduce the risk of starting the power tool accidentally.*
  - d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** *Power tools are dangerous in the hands of untrained users.*
  - e) **Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** *Many accidents are caused by poorly maintained power tools.*
  - f) **Keep cutting tools sharp and clean.** *Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.*
  - g) **Use the power tool, accessories and tool bits ect. in accordance with these instructions, taking into account the working conditions and the work to be performed.** *Use of the power tool for operations different from those intended could result in a hazardous situation.*
  - h) **Keep handles and grasping surfaces dry, clean and free from oil and grease.** *Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.*
5. Service
- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** *This will ensure that the safety of the power tool is maintained.*




## 5 Safety and information labels

There are labels on your unit that contain important instructions and safety information.

- Keep all labels legible.
- Replace missing or illegible labels.

The item numbers on the labels can be found in the parts book.



Item	Label	Description
1		Use personal protection equipment in order to avoid injuries and health hazards: <ul style="list-style-type: none"> <li>■ Ear protection.</li> <li>■ Eye protection.</li> </ul> Read the operator's manual before commissioning.
2		Observe the operative position.
3		Warning.

## 6 Setup and function

### 6.1 Standard package

The standard package includes:

- Drive motor.
- Shoulder strap.
- Operator's manual.

The HMS consists of several components, see chapter *Technical Data*:

- Drive motor.
- Flexible shaft (optional).
- Vibrator head (optional).

---

#### NOTICE

The components that are marked as "optional" must be ordered separately. You can find information about the assembly of an HMS in the chapter *Permissible combinations*.

---

### 6.2 Application

Only use the equipment in accordance with the intended purpose, see chapter *Safety, Use in accordance with the intended purpose*.

### 6.3 Application area

The drive motor may only be used for the operation of flexible shafts and vibrator heads.

You can use the combined HMS for the following activities:

- Compaction of freshly mixed (green) concrete.

### 6.4 Mode of operation

#### Principle

The drive motor drives the vibrator head via the flexible shaft, which generates high frequency vibrations. The vibrator head makes gyrations due to these vibrations.

The immersion of the vibrator head in the freshly mixed (green) concrete de-aerates and compacts the concrete in the operating area of the vibrator head.

At the same time, the freshly mixed (green) concrete cools the vibrator head.

---


#### NOTICE

The concrete is being compacted as long as air bubbles are rising.

---

## 7 Components and operator's controls

### 7.1 Components and operator's controls of the drive motor

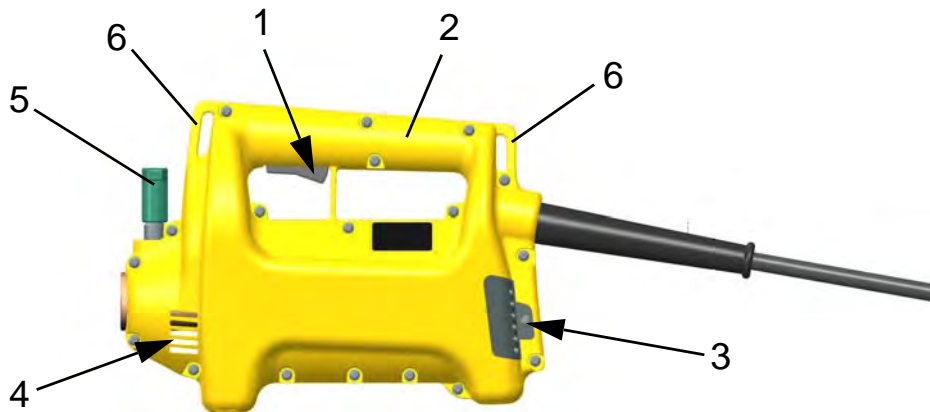

Item	Designation	Item	Designation
1	ON/OFF switch	4	Air outlet
2	Handle	5	T-Handle
3	Air inlet	6	Lugs for shoulder strap

#### T-Handle

The t-handle has different colors for the different versions, see chapter *Technical Data*.

With the t-handle, the quick disconnect coupling is opened so as to allow for a quick replacement and a secure connection link of the flexible shaft to the drive motor.

#### Air inlet and outlet


Airflow enters into the housing of the drive motor through the air cleaner element, cools the electric motor and exits through the ventilation slots. The airflow is represented by arrows in the drawing.

### 7.2 Components of the HMS


Depending on the application conditions, you can combine these components in different designs.

You can find information about the assembly of an HMS in the chapter *Permissible combinations*.


**The HMS is composed of the following components:**

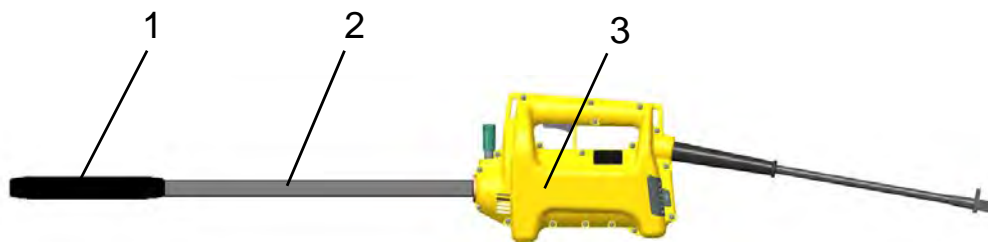

Item	Designation	Item	Designation
1	Vibrator head (optional)	3	Drive motor
2	Flexible shaft (optional)		

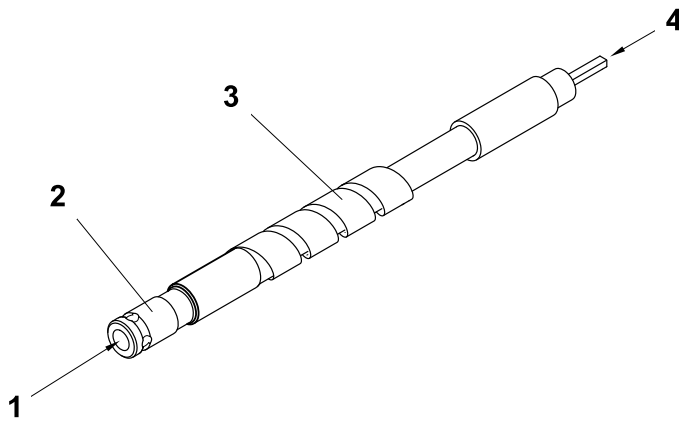**7.3 Components of the flexible shaft (optional)**


Item	Designation	Item	Designation
1	Connection to the drive motor	3	Bend protection
2	Coupling piece	4	Connection to vibrator head

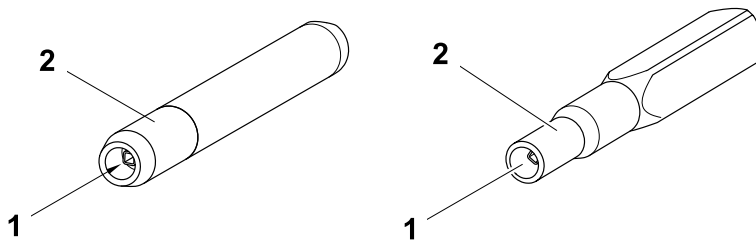**7.4 Components of the vibrator head (optional)**


Item	Designation	Item	Designation
1	Fitting	2	Shaft core adapter

## 8 Transport, entire system (HMS)



---

### WARNING

Improper handling can lead to injuries or serious damage to property.

- Read and observe all safety instructions in this operator's manual, see chapter *Safety*.
- 



---

### WARNING

Hot vibrator head.  
Contact may cause burns.

- Only touch the vibrator head once the engine has cooled down.
  - Wear protective gloves.
- 

### Perform preparations

1. Switch the drive motor off with the ON/OFF switch.
2. Wait until the HMS come to a complete standstill.
3. Pull the plug out of the plug receptacle.
4. Disconnect the flexible shaft (including vibrator head) from the drive motor.
5. Allow the drive motor and vibrator head to cool down.

### Transporting the equipment

1. Place the drive motor in or on a suitable transport means (operative position).
2. Wind up the power cable.

---

### NOTICE

Do to kink the power cable!

---

3. Place the flexible shaft (including the vibrator head) in or on the suitable transport means as well.
4. Secure all components against falling down or sliding away.

### Shoulder strap for drive motor

For longer flexible shafts, please use a shoulder strap to facilitate work.

You can carry the drive motor with the shoulder strap if you have to change your position frequently.

## 9 Assembly of the HMS

### 9.1 Pre-assemble the vibrator head


**WARNING**


Rotating parts.  
Hand injuries are possible.

- Switch off the drive motor.
- Disconnect the flexible shaft from the drive motor.

**Working in the workshop**

Perform maintenance jobs in a workshop on a workbench. This has the following advantages:


- Protection of the equipment from dirt on the construction site.
- A level and clean working surface makes work easier.
- Small parts are easier to see and therefore are harder to lose.

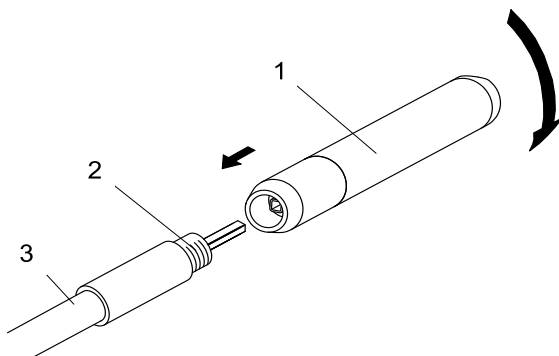**Screw the vibrator head onto the flexible shaft**


Item	Designation	Item	Designation
1	Vibrator head	3	Flexible shaft
2	Thread		

1. Clamp the flexible shaft in a vise with prism jaws.
2. Apply pipe thread seal to the thread of the flexible shaft.
3. Place the vibrator head with the thread on the flexible shaft while inserting the shaft core into the shaft core adapter of the vibrator head.
4. Screw the vibrator head onto the flexible shaft (note the left hand thread!) and tighten with a pipe wrench.
5. Allow the pipe thread seal to cure for 24 hours.

### Connect the flexible shaft to the drive motor

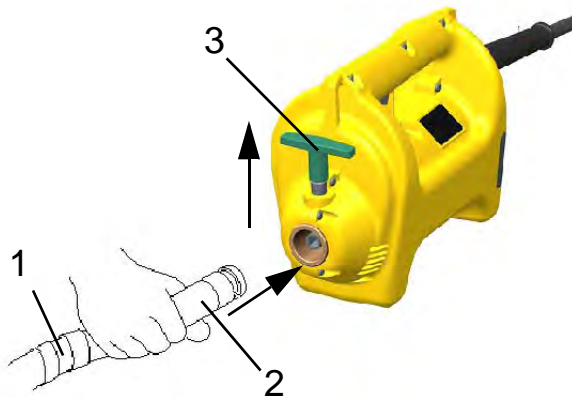

Item	Designation	Item	Designation
1	Flexible shaft	3	T-Handle
2	Coupling piece		

1. Switch the drive motor off with the ON/OFF switch.
2. Pull the plug out of the plug receptacle.
3. Place the drive motor on the ground.
4. Pull the t-handle upwards.
5. Insert the coupling of the flexible shaft into the quick disconnect coupling of the drive motor and note the detent. In the process, the shaft core is received in the shaft core adapter of the drive motor.
6. Release the t-handle.
7. Rotate the flexible shaft until the quick disconnect coupling locks into place.
8. Pull on the flexible shaft to control whether the quick disconnect coupling is completely locked into place.

#### NOTICE

If the shaft core of the flexible shaft is new, you have to run in the drive motor for about 5 minutes with a connected flexible shaft (possibly also with the vibrator head).

## 10 Operation



---

**WARNING**

Improper handling can lead to injuries or serious damage to property.

- Read and observe all safety instructions in this operator's manual, see chapter *Safety*.
- 



---

**WARNING**

Leak current due to moisture penetration.

Injury from electric shock.

- In a humid environment, hold or stop the equipment in the operative position.
  - Use the extension cable in IPx4 design so that the connection link of the plug / coupling is splash-water protected.
- 

### 10.1 Before commissioning

#### Previous conditions for operation

The HMS may only be operated under the following previous conditions:

- The HMS is pre-assembled according to this operator's manual:
  - The vibrator head is bolted onto the flexible shaft.
  - The flexible shaft (including vibrator head) is coupled with the drive motor.

---

**NOTICE**

For longer flexible shafts, Wacker Neuson recommends using a shoulder strap.

---

#### Check equipment

- Check the HMS and all components for damage.
- Check for a firm seat of the flexible shaft in the drive motor.
- Check the shoulder strap for damage.

#### Check the power supply system

- Check whether the power supply system or construction site electrical distributor has the correct operating voltage (see nameplate of the equipment or chapter *Technical Data*).
- Check whether the power supply system or construction site electrical distributor are verified according to the applicable national standards and guidelines.

### 10.2 Commission

#### Connect the HMS to the electric power supply

---

**NOTICE**

Electrical voltage.

An incorrect voltage can damage the equipment.

- Check whether the voltage of the power source conforms to the specifications of the equipment, see chapter *Technical Data*.
- 



---

**WARNING**

Electrical voltage.


Injury from electric shock.

- Check power cable and extension cable for damage.
  - Only use extension cables whose grounded conductor is connected to the plug and coupling (only for equipment of class rating I, see chapter *Technical data*).
-

**WARNING**

Start-up of the equipment.  
Risk of injury from uncontrolled start-up of the equipment.

- Switch the equipment off before connecting to the electric power supply.

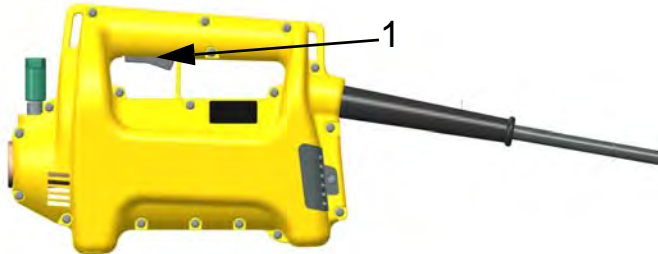**Switch on the equipment**

Item	Designation
1	ON/OFF switch

1. Hold the equipment with one hand.
2. With the other hand, lift the protection hose so that the vibrator head does not beat around.
3. Switch the equipment on with the ON/OFF switch.

**NOTICE**

For flexible shafts longer than 2 meters, designate a helper to lift the vibrator head on the protection hose off the ground to avoid damage to the equipment or the subgrade.

**Compacting freshly mixed (green) concrete**

1. Quickly immerse, submerge the vibrator head into the freshly mixed (green) concrete, wait for a few seconds and slowly pull it out.
2. Immerse the vibrator head in all areas of the formwork and compact the freshly mixed (green) concrete.

**NOTICE**

- Compact particularly intensely within the range of formwork corners, because the spacing between the steel rods is the narrowest there.
- **Avoid the vibrator head coming into contact with the reinforcement. If the vibrator head comes into contact with the reinforcement, the following damage may occur:**

- The connection of the concrete to the reinforcement may be lost.
- The equipment may be damaged.

**The result of the compaction depends on the following factors:**

- The time the vibrator head is in the concrete.
- The diameter of the vibrator head.
- The consistency of the concrete.
- Narrow spacing between the steel rods.

If you, for example, use a vibrator head with a small diameter, you have to compact for longer to achieve the same effect as with a large diameter.

**Features of when the concrete has been sufficiently compacted:**

- The concrete is no longer settling.
- Little to no air bubbles are rising any longer.
- The sound of the vibrator head no longer changes.

## 10.3 Decommissioning

### Switch off the unit



---

**CAUTION**

Proper motion of the running vibrator head outside of the freshly mixed (green) concrete. Risk of injury or danger of property damage due to beating around vibrator head.

- Switch the equipment off before setting it down.
- 



---

**CAUTION**

Warming up the running vibrator head outside of the freshly mixed (green) concrete. Risk of burning from hot surface.

Damage to the equipment from increased wear.

- Do not run the equipment outside of the freshly mixed (green) concrete.
- 

1. Slowly pull the vibrator head out of the freshly mixed (green) concrete and hold it in the air.
2. Switch the equipment off with the ON/OFF switch.
3. Wait until the equipment has come to a complete standstill.
4. Slowly stop the equipment (operative position) and set down the corresponding flexible shaft and vibrator head.

---

**NOTICE**

Do not bend the protection hose and power cable.

---

5. Pull the plug out of the plug receptacle.
6. Allow the equipment to cool down.

### Disconnect the flexible shaft from the drive motor



---

**CAUTION**

Risk of burning from hot coupling of the flexible shaft.

- Only touch the coupling with protective gloves.
- 

1. Pull the t-handle.
2. Pull the coupling of the flexible shaft out of the quick disconnect coupling of the drive system.
3. Release the t-handle.
4. Safely place the equipment down on level and stable surface so that the drive motor cannot tip over, fall over or slip away.

### Clean equipment

Clean all components of the HMS after every application.

1. Clean the vibrator head and flexible shaft with water.

---

**NOTICE**

With the equipment running, you can remove the concrete residue from the vibrator head by immersing it in a gravel bed.

---

2. Wipe down the drive motor and flexible shaft with a damp clean cloth.
3. Clean the ventilation slots with an appropriate, non-metallic auxiliary tool.

**11.2.2 HMS**

Activity	Daily before operation	Every 50 hours	Every 100 hours	Every 300 hours
Visual inspection of all elements for damage.	■			
Check to ensure the connection links are firmly seated: <ul style="list-style-type: none"> <li>■ Flexible shaft – vibrator head: tighten if necessary.</li> <li>■ Flexible shaft – drive motor: securely lock the coupling into place if necessary.</li> </ul>	■			
Clean HMS.	■			
Check wear dimensions of the vibrator head.		■		
Lubricate the flexible shaft and exchange the plastic bushing.			■	
Replace the oil in the vibrator head.*				■
* Have this work performed by the service department of your Wacker Neuson contact partner.				

**11.3 Maintenance work**
**Working in the workshop**

Perform maintenance work in a workshop on a workbench. This has the following advantages:

- Protection of the equipment from dirt on the construction site.
- A level and clean working surface makes work easier.
- Small parts are easier to see and therefore are harder to lose.

**Visual inspection for damage**

**WARNING**

Damage to an equipment part or power cable can lead to physical injury from electric shock.

- Do not operate damaged equipment.
- Have damaged equipment repaired immediately.

- Check all components of the HMS for damage.
- Check the drive motor for damage or cracks.
- Check to ensure the ON/OFF switch of the drive motor is functioning.

**11.3.1 Clean HMS**

Clean the HMS after application.

**NOTICE**

Do not clean the equipment with high pressure or steam cleaners!

- Wipe down the drive motor and flexible shaft with a damp clean cloth.
- Clean the ventilation slots with an appropriate, non-metallic auxiliary tool.
- Clean the vibrator head and protection hose with water.

**NOTICE**

With the equipment running, you can remove the concrete residue from the vibrator head by immersing it in a gravel bed.

## 12 Troubleshooting

You can find possible faults, their causes and solutions in the following table.

Fault	Cause	Remedial measure
HMS does not work.	The power supply is interrupted.	Check the power cable. If defective, have it exchanged.*
	Worn carbon brushes.	Exchange the carbon brushes.*
	Defective ON/OFF switch.	Have the ON/OFF switch exchanged.*
	Electric power supply safeguard triggered.	Activate safeguard.
	Burned out drive motor.	Exchange drive motor.*
HMS skips.	Worn carbon brushes.	Exchange the carbon brushes.*
Drive motor is running very loudly.	Broken carbon brushes.	Exchange the carbon brushes.*
	Worn bearing of the drive motor.	Have the equipment parts exchanged.*
	Rotor grinding on the stator.	
Drive motor is running normally, but is overheating.	The filter element or air inlet is obstructed.	Remove the dirt; exchange the filter element if necessary.
	Too much special lubricant in the connected flexible shaft.	Remove excess special lubricant with a cloth or exchange the flexible shaft.
	Too much oil in the vibrator head.	Remove excessive oil.*
Drive motor is running slowly and is overheating.	Input voltage too low.	Establish the correct supply voltage.
	The cross-section of the extension cable is too small.	Use an extension cable with a sufficient cross-section.
	Incorrect combination of vibrator head and flexible shaft.	Use a combination according to the table, see chapter <i>Technical Data</i> .
	Shaft core of the flexible shaft insufficiently lubricated.	Lubricate the shaft core.
	Bearing of the vibrator head or the drive system worn.	Have the equipment parts exchanged.*
	Rotor grinding on the stator.	
* Have this work performed by the service department of your Wacker Neuson contact partner.		

## 13 Permissible combinations

You can combine these components in different designs, depending on the application conditions.

### 13.1 Drive motor – Flexible shaft – Vibrator head

#### NOTICE

Excessively large vibrator heads or excessively long flexible shafts overload the drive motor.

Excess wear and damage to the components is possible.

- Only use permissible combinations of components.

Vibrator head	Flexible shafts					
	SM1-E	SM2-E	SM3-E	SM4-E	SM5-E	SM7-E
H25	M1500 or M2500					
H25 S						
H25 HA						

Vibrator head	Flexible shafts							
	SM0-S	SM1-S	SM2-S	SM3-S	SM4-S	SM5-S	SM7-S	SM9-S
H35	M1500 or M2500							
H35 S								
H35 HA								
H45								
H45 S								
H45 HA								
H50 HA	M2500							
H55								
H65								
HR48*								
HR65*								
HR70*								
HR70 S*	M2500							
* Not available in every region.								

## 16 Technical data

### 16.1 Drive motor

Designation	Unit	M1500/120 US	M2500/120 US
Item no.		5100004500	5100006000
T-handle (color)		green	red
Rated current	A	12.5	15.0
Rated voltage	V	120	120
Rated frequency	Hz	50 – 60	50 – 60
Phases	~	1	1
Length	mm (in)	312 (12.3)	312 (12.3)
Width	mm (in)	154 (6.1)	154 (6.1)
Height	mm (in)	230 (9.1)	230 (9.1)
Length of power cable	m (ft)	0,5 (1.6)	0,5 (1.6)
Weight	kg (lb)	4,9 (10.8)	5,4 (11.9)
Plug		NEMA 1-15P (Typ A)	NEMA 1-15P (Typ A)
Type of engine		Universal motor	Universal motor
Rated performance	kW	1,50	1,80
Nominal speed	min <sup>-1</sup> (rpm)	11.500 (11,500)	12.000 (12,000)
Idle speed	min <sup>-1</sup> (rpm)	14.000 (14,000)	16.000 (16,000)
Protection class		II	II
Protection		IP 24	IP 24
Sound pressure level L <sub>pA</sub> *	dB(A)	85.0	85.0
Standards		DIN EN ISO 11201	
Vibration total value a <sub>hV</sub>	m/s <sup>2</sup> ft/s <sup>2</sup>	5,0 (16.4)	5,0 (16.4)
Standards		DIN EN ISO 20643	
Uncertainty of measurement of the vibration total value a <sub>hV</sub>	m/s <sup>2</sup> ft/s <sup>2</sup>	1,0 (3.3)	1,0 (3.3)
* Sound pressure level when operating the equipment at nominal speed and freely suspended play at 1 meter of distance			

### 16.2 Flexible shaft-E (optional)

Designation	Unit	SM1-E	SM2-E	SM3-E	SM4-E	SM5-E	SM7-E
Length	m (ft)	1,0 (3.3)	2,0 (6.6)	3,0 (9.8)	4,0 (13.1)	5,0 (16.4)	7,0 (23.0)
Weight	kg (lb)	1,5 (3.2)	2,5 (5.5)	3,4 (7.5)	4,3 (9.4)	5,2 (11.5)	7,0 (15.4)

**16.3 Flexible shaft-S (optional)**

Designation	Unit	SM0-S	SM1-S	SM2-S	SM3-S
Length	m (ft)	0,5 (1.6)	1,0 (3.3)	2,0 (6.6)	3,0 (9.8)
Weight	kg (lb)	1,3 (2.9)	2,7 (6.0)	4,3 (9.5)	5,9 (13.0)

Designation	Unit	SM4-S	SM5-S	SM7-S	SM9-S
Length	m (ft)	4,0 (13.1)	5,0 (16.4)	7,0 (23.0)	9,0 (29.5)
Weight	kg (lb)	7,1 (15.7)	9,3 (20.5)	12,9 (28.4)	15,1 (33.3)

**16.4 Vibrator head standard (optional)**

Designation	Unit	H25	H25 S	H35	H35 S
Swing play	mm (in)	1,1 (0.043)	0,8 (0.031)	2,2 (0.1)	1,7 (0.1)
Vibrations	1/min	12,000	12,000	12,000	12,000
Vibrations	Hz	200	200	200	200
Vibrator head shape		Round	Round	Round	Round
Vibrator head diameter / diagonal	mm (in)	25 (1.0)	25 (1.0)	35 (1.4)	35 (1.4)
Length of vibrator head	mm (in)	440 (17.3)	295 (11.6)	410 (16.1)	310 (12.2)
Weight	kg (lb)	1,3 (2.9)	0,8 (1.8)	2,1 (4.7)	1,7 (3.6)
Oil specification		Synthetic oil	Synthetic oil	Synthetic oil	Synthetic oil
Oil quantity	l	0.010	0.010	0.015	0.015

Designation	Unit	H45	H45 S	H55	H65
Swing play	mm (in)	2,7 (0.1)	1,8 (0.1)	3,1 (0.1)	3,2 (0.1)
Vibrations	1/min	12,000	12,000	12,000	12,000
Vibrations	Hz	200	200	200	200
Vibrator head shape		Round	Round	Round	Round
Vibrator head diameter / diagonal	mm (in)	45 (1.8)	45 (1.8)	57 (2.2)	65 (2.6)
Length of vibrator head	mm (in)	385 (15.2)	305 (12.0)	410 (16.1)	385 (15.2)
Weight	kg (lb)	3,4 (7.5)	2,8 (6.2)	5,3 (11.7)	6,2 (13.7)
Oil specification		Synthetic oil	Synthetic oil	Synthetic oil	Synthetic oil
Oil quantity	l	0.022	0.019	0.033	0.044

## 16.5 Vibrator head HA (optional)

Designation	Unit	H25HA	H35HA	H45HA	H50HA
Swing play	mm (in)	2,1 (0.1)	2,1 (0.1)	3,0 (0.1)	3,5 (0.1)
Vibrations	1/min	12,000	12,000	12,000	12,000
Vibrations	Hz	200	200	200	200
Vibrator head shape		Square	Square	Square	Square
Vibrator head diameter / diagonal	mm (in)	26 (1.0)	36 (1.4)	45 (1.8)	50 (2.0)
Length of vibrator head	mm (in)	380 (15.0)	405 (15.9)	390 (15.4)	395 (15.6)
Weight	kg (lb)	1,3 (2.8)	2,3 (5.1)	3,3 (7.3)	3,9 (8.6)
Oil specification		Synthetic oil	Synthetic oil	Synthetic oil	Synthetic oil
Oil quantity	l	0.010	0.020	0.030	0.050

## 16.6 Extension cable



### WARNING

Electrical voltage.  
Injury from electric shock.

- Check power cable and extension cable for damage.
- Only use extension cables whose grounded conductor is connected to the plug and coupling (only for equipment of class rating I, see chapter *Technical data*).

- Only use permitted extension cables, see chapter *Safety*.
- Find the necessary stranded conductor cross-section of the extension cable in the following table:

### NOTICE

You can find the model designation and voltage of your equipment on the nameplate or using the item number from the chapter *Technical data*.

Machine	Voltage [V]	Extension [m]	Cross-section area of cable [mm <sup>2</sup> ]
M1500 US	120 1~	≤ 25	1,5
		≤ 42	2,5
		≤ 66	4,0
		≤ 98	6,0
		≤ 160	10,0
M2500 US	120 1~	≤ 21	1,5
		≤ 35	2,5
		≤ 55	4,0
		≤ 82	6,0
		≤ 133	10,0



**Example:** You have a M1500/120 and would like to use a 40-meter long extension cable.  
The equipment has 120 V input voltage.  
According to the table, your extension cable must have a stranded conductor cross-section of 2.5 mm<sup>2</sup>.

**US Machine**

Machine	Voltage [V]	Extension ft	Cross-section area of cable AWG
M1500 US	120 1~	≤ 113	14
		≤ 179	12
		≤ 383	10
		≤ 442	8
M2500 US	120 1~	≤ 95	14
		≤ 149	12
		≤ 235	10
		≤ 368	8

## 17 Glossary

### Class rating

The class rating according to DIN EN 61140 identifies electrical machines in terms of safety measures for the prevention of an electric shock. There are four class ratings:

Class rating	Significance
0	No special protection, other than the basic insulation. No grounded conductor. Plug connection without a grounded conductor contact.
I	Connection of all conductive housing components to the grounded conductor. Plug connection with a grounded conductor contact.
II	Reinforced or double insulation (protective insulation). No connection to the grounded conductor. Plug connection without a grounded conductor contact.
III	Machines are operated with a protective low voltage (<50 V). Connection to the grounded conductor is not necessary. Plug connection without a grounded conductor contact.

### Protection rating IP

The protection rating DIN EN 60529 indicates the suitability of electrical machines for certain environmental conditions and also the protection against hazards.

The protection rating is specified with an IP code according to DIN EN 60529.


Code	Significance of 1st digit: Protection against contact with hazardous parts. Protection against ingress of foreign bodies.
0	Not protected against contact. Not protected against foreign bodies.
1	Protected against contact with the back of the hand. Protected against large foreign bodies with a diameter of > 50 mm.
2	Protected against contact with a finger. Protected against medium foreign bodies (diameter > 12.5 mm).
3	Protected against contact with a tool (diameter > 2.5 mm). Protected against small foreign bodies (diameter of > 2.5 mm).
4	Protected against contact with a wire (diameter > 1 mm). Protected against particle shape foreign bodies (diameter > 1 mm).
5	Protected against contact. Protected against dust deposits inside.
6	Completely protected against contact. Protected against dust ingress.

Code	Significance of 2nd digit: Protection against ingress of water
0	Not protected against water penetration.
1	Protected against vertically falling drip water.
2	Protected against angled falling drip water (15° inclination).
3	Protected against spray water (60° inclination).
4	Protected against splash water from all directions.
5	Protected against water jets (nozzle) from any angle.
6	Protected against powerful water jets (flooding).
7	Protected against temporary submersion in water.
8	Protected against continuous submersion in water.

**Our associates will ensure the tool works properly before you leave the store. If you experience issues with the tool while completing your project, simply bring it back to the Tool Rental Center to get a replacement. If you purchase Damage Protection at the time of your rental, you are not responsible for repair costs for tools that break due to normal use.**



## BRPV105 CONCRETE VIBRATOR ELECTRIC 115V

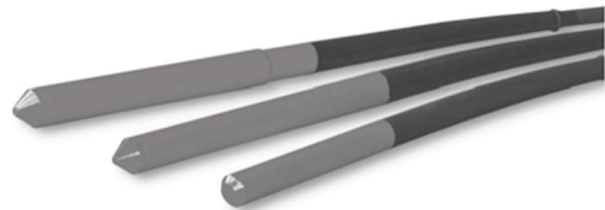




BRPV105 2.3KW BRVS6-13 115V 50HZ/60HZ		
ITEM NO.	PART NO.	DESCRIPTION
A	BRVH15	Poker Head 1.5" x 10" Concrete Vibrator (BRPV105)
	BRVH20	Poker Head 2" x 15.5" Concrete Vibrator (BRPV105)
B.1	BRVS6	Shaft Assembly, 6.5'w/ 1.5" Poker Head ( BRPV105)
	BRVS10	Shaft Assembly, 10'w/ 1.5" Poker Head ( BRPV105)
	BRV513	Shaft Assembly, 13'w/ 1.5" Poker Head ( BRPV105)
D.1	BRPV105	Electric Motor (Pin type)

# **BRAVEPRO**

## **OPERATORS MANUAL**

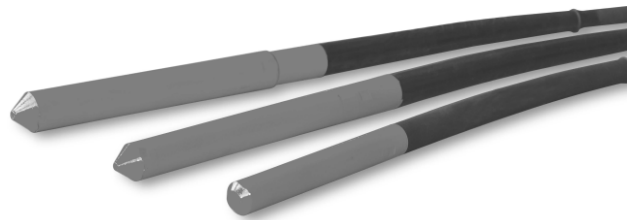

### **PORTABLE ECCENTRIC CONCRETE VIBRATOR**

**BRPV105**

## Table of Contents

### 1. SAFETY INFORMATION

1.1 Safety Precautions .....	2
1.2 Operating Safety.....	3
1.3 Personal Safety.....	4
1.4 Labels .....	5-6

### 2. OPERATION

2.1 Operating Principle.....	7
2.2 Usage conditions .....	7
2.3 Before Starting.....	8
2.4 To Start .....	8
2.5 To Stop .....	8
2.6 Operation.....	8
2.7 When Operation is Finished .....	9

### 3. MAINTENANCE

3.1 Periodic Maintenance of the Electric Power Assy.....	10
3.2 Periodic Maintenance of Flexible Shaft and Poker Head.....	10
3.3 Lubrication.....	10
3.4 Transporting .....	11
3.5 Storage .....	11
3.6 Trouble Shooting .....	11

### 4. TECHNICAL DATA .....

### 5. WARRANTY .....

### 6. MAINTENANCE RECORD .....

### 7. EC DECLARATION .....

## SAFETY INFORMATION

### 1.1 Safety Precautions

**Before operating the power tool, read the manual carefully to become familiar with the location and proper use of all controls. Do not allow untrained or unauthorized personnel, especially children, to operate this machine. Use only the parts authorized by the factory for service.**

This manual contains DANGER, WARNING, CAUTION callouts which must be followed to reduce the possibility of personal injury, damage to the equipment, or improper service.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



**DANGER**

DANGER indicates a hazardous procedure which, if not avoided, will result in serious or mortal injury.



**WARNING**

WARNING indicates a danger or hazardous procedure which, if not avoided, could result in serious or mortal injury.



**CAUTION**

CAUTION indicates a danger or hazardous procedure which, if not avoided, could result in damage to machinery or moderate injury.

## **SAFETY INFORMATION**

### **1.2 Operating Safety**

- DO NOT modify the power tool without the prior consent of the manufacturer. We do not assume responsibility for any accident due to equipment modification.
- NEVER operate the power tool in purpose for which it is not intended.
- NEVER allow anyone to operate the machine without proper training. People operating the machine must be familiar with the risks and hazards associated with it. And familiar with the safety precautions and operation techniques.
- KEEP bystanders, children, and visitors away while operating a power tool.
- ALWAYS operate the tool with all safety devices and guards in place and in working order.
- ALWAYS wear appropriate clothing, wear hearing and eye protection when operating the tool.
- DO NOT use the tool near flammable material or in explosive environments. The exhaust pipe can get very hot during operation. Sparks can be emitted from it, and these can ignite flammable material.
- ALWAYS keep the work area clean and well lit. Cluttered and dark areas invite accidents.
- DO NOT clean or service the machine when it is running.
- NEVER use the defective parts.
- NEVER leave the power tool running unattended.
- DO NOT force the power tool. Use the correct power tool for your application.
- DO NOT use the power tool if the switch does not turn it on and off.
- DISCONNECT the plug from the power source before making any adjustments, changing accessories, or storing power tools.
- Power tool plugs must match the outlet. Never modify the plug in any way.
- DO NOT expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- DO NOT abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.
- If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.

## SAFETY INFORMATION

### 1.3 Personal Safety

- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury..
- Use safety equipment. Always wear eye protection. Safety equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- Avoid accidental starting. Ensure the switch is in the off position before plugging in. Carrying power tools with your finger on the switch or plugging in power tools that have the switch on invites accidents.
- Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- DO NOT OVERREACH. Keep proper footing and balance at all times. This enables better control of the vibrator in unexpected situations.
- Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.
- If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of these devices can reduce dust related hazards.
- Store idle vibrator out of the reach of children.

## SAFETY INFORMATION




### 1.4 Labels

Your unit has adhesive labels containing the most important instructions and safety information.

- Make sure that all the labels are kept legible.
- Replace any missing or illegible labels.



## SAFETY INFORMATION

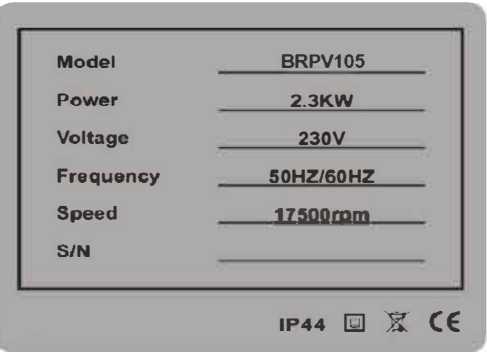Label	Meaning
	<p><b>WARNING!</b> Always wear hearing and eye protection when operating the machine.</p>
	<p><b>WARNING!</b> Always wear work gloves and non-skid, hard-toes shoes when operating the machine.</p>
	<p>A nameplate listing the model number and serial number is attached to each unit. Please record the information found on this plate so it will be available if the nameplate is lost or damaged. When requesting service information, the serial number should be specified for the unit.</p>

## OPERATION

### 2.1 Operating Principle

The following instructions were compiled to provide you information on how to obtain long and trouble free use of the vibrator. Periodic maintenance of the vibrator is essential. Read the manual carefully and thoroughly familiarize yourself with the machine and all its functions. Failure to do so may injure yourself or a bystander.

### 2.2 Usage Conditions

The concrete vibrator consists of an electrical motor in an impact and shockproof plastic housing and a flexible poker vibrator. The flexible poker is attached to the part of the spindle which sticks out of the motor housing. On the motor housing is a switch for turning the electrical motor on and off.

The concrete vibrator is applied to tamp concrete products and concrete pouring construction with various kinds of reinforcing bars, clear up spiracle in concrete and offer intensity of concrete member. The vibrator can only be operated safely when the operation instructions and the safety instructions have been completely read and strictly adhered to

Never use the tool without the RCD (residual current device) provided with the tool!

Test the correct operation of the RCD (residual current device) before starting work!

Do not keep working the poker out of the concrete more than 5 minutes.

Do not restrict the movement of the poker during the work.

Do not stop the poker inside the concrete.

Change the wear parts to avoid damage to the internal parts.

## OPERATION

### 2.3 Before Starting

Before starting the power tool, must know the location and function of all controls, and check the following items:

- The switch on the motor is in the off position.
- The cord has no defects.
- All bolted joints are tightened.
- Be sure the poker is well screwed to the flexible shaft.
- When notice wear parts, replace it.

**NOTICE:** Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation.

### 2.4 To Start

Place the flexible poker into the concrete and press the switch on the motor to the ON position.

### 2.5 To Stop

Pull the flexible poker out of the concrete and turn the switch on the motor to the OFF position.

### 2.6 Operation

1. Keep the bending radius of the flexible hose to a minimum during use.
2. DO NOT start the tool with the poker head immersed in the concrete mix. After the tool has started, immerse the poker head quickly into the concrete mix.
3. NEVER turn the power tool off when the vibrator head is immersed in the concrete.
4. When moving around the jobsite, do not drag the poker head and shaft on the ground.
5. DO NOT allow the poker head to vibrate against already hardened concrete or steel used in reinforcement.
6. NEVER drop or knock the vibrator head against any hard objects.
7. DO NOT switch off or cut off the electricity supply when tap hose is taping concrete, or tap hose would become involved in concrete and difficult to be got out due to cease of vibration.
8. Pay attention to the fraying condition of carbon brush.
9. Check seal condition of all the joints between tube and tap hose during using it (please turn to left to fix connector), do not let water and concrete get into the vibrator and damage the bearing and oil tight in it and result in the cease of machine finally. Preventing motor from water and concrete can prolong the usage time of it.
10. Stop using of vibrator as soon as the appearance of abnormal voice, over great spark from brush, over high temperature and peculiar smell, and go on to use it

## OPERATION

after researched the reason and repaired.

11. Each time after 100 hours use of vibrator, please take apart spare parts as tube, rotating shaft and hose to clean and replace lubricant grease, examine whether rubber oil tight and O type seal ring still well, replace them with new one if they are damaged. Please be informed that there should be no water and oil in the lower lumen of oil tight, otherwise the vibrator will vibrate in weak power. In order to prevent the vibrator from water, please use 0.2mm polytetrafluoroethylene belt to pack threading when your seal threading joint in assembling the machine.

### CAUTION:

- If the shaft begins to helix excessively during operation, stop and investigate. This is an indication of an overload condition.
- The poker head is cooled by the concrete. Operation of the vibrator in air more than 2 minutes will cause overheating of the bearings which result in premature head failure.
- The distance between two vibration places and the vibration period in one place, depends on the thickness of the concrete layer and the composition of the concrete.

### 2.7 When Operation is Finished

1. Bring the head out of the concrete and proceed to stops. Never be stopped while it is introduced into the concrete.
2. Turn the switch on the motor to the OFF position.
3. ALWAYS rinse or wipe off the vibrator head and shaft any wet concrete before it dries or hardens.
4. Please clean the outside of machine, pony roll and tie up cable wire every time after you used it. Do not leave them lying about.